


Installation:

1. The track is installed on the ceiling, aligning the track four to six inches wider than the outside edge of the tub so that the shower curtain will slope in when attached. If the track is longer than the distance available, shorten each end an equal amount using a hacksaw. On the shortened ends, using the End Cap as a guide, drill a new 7/32" screw hole.
2. Hold the track to the ceiling and mark the four holes on the ceiling. Take the track down and drill a 1/8" pilot hole at the marks for the drywall anchor and screw. If a drill hole hits a stud, no drywall anchor is needed and the mounting screws can be screwed directly into the stud at the pilot hole. In holes where you do not hit a stud, drill a 1/4" hole through the drywall; insert a drywall anchor into the 1/4" hole, tapping it in lightly with a hammer until it is flush with the ceiling.
3. Before attaching the track, insert the Carriers into the track. Make sure to insert the number of Carriers to match the number of grommets in the curtain. (Note: there are probably a few extra Carriers included in the package.)
4. With End Caps in place, attach the track at the mounting holes with #10 x 1 1/2" screws. Start with the two inner screws; then add the screws at the End Caps.
5. Attach the curtain to the Carriers.

Picture Installation:

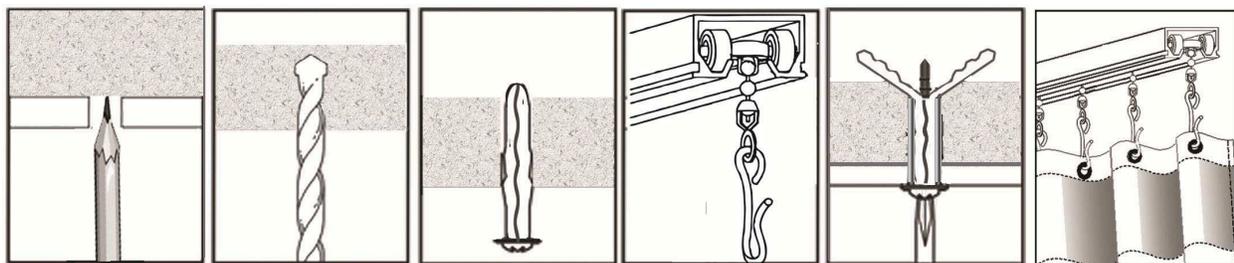

Using the Track as Pattern, Mark Holes on Ceiling

Drill 1/8" Pilot Hole in Drywall, If No Stud, Drill 1/4" Hole

Insert Drywall Anchors in Dry-wall if No Stud

Insert in Track same # of Carriers as Grommets

Attach Track to Ceiling at Mounting Holes

Hang Shower Curtain and Enjoy Your New Trax