


### Included Items:

- Two Sections (or Four) of Track, two with 45° corners
- Connector (s)
- 2 End Caps
- 8 Drywall 1/4" Anchors
- 8 #10 x 1 1/2" Screws
- 12 or 18 Carriers with Hooks


### Recommended Tools:

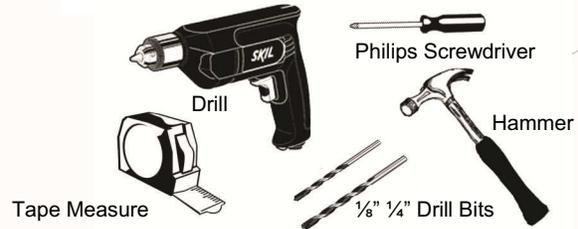

### Installation:

1. The Neo-angle track is installed on the ceiling, aligning the track as desired. Slip the sections of track together at the Connector and hold to ceiling to see that it fits as desired.
2. Hold the track to the ceiling and mark the eight holes on the ceiling. Take the track down and drill a 1/8" pilot hole at the marks for the drywall anchor and screw. If a drill hole hits a stud, no drywall anchor is needed and the mounting screws can be screwed directly into the stud at the pilot hole. In holes where you do not hit a stud, drill a 1/4" hole through the drywall; insert a drywall anchor into the 1/4" hole, tapping it in lightly with a hammer until it is flush with the ceiling.
3. Before attaching the track, insert the Carriers/Hooks into the track. Make sure to insert the number of Carriers to match the number of grommets in the curtain. (Note: there are probably a few extra Carriers included in the package.)
4. With End Caps and Connector in place, attach the track at the mounting holes with #10 x 1 1/2" screws. Start with the center screw on each section; then add the screws at the Connector and finally add the screws at the End Caps.
5. Attach the curtain to the Carriers/Hooks.

### Picture Installation:

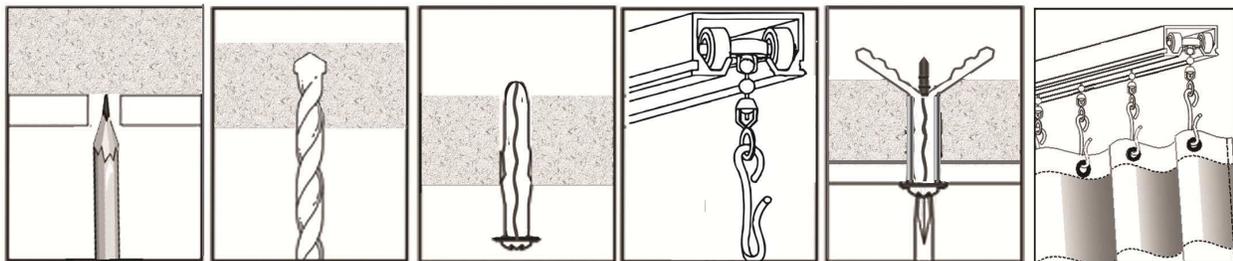

Using Track as  
Pattern Mark Pilot  
Holes on Ceiling

Drill 1/8" Pilot Hole  
in Drywall; If No  
Stud, Drill 1/4" Hole

Insert Drywall  
Anchors in Dry-  
wall if No Stud

Insert in Track  
same # of Carriers  
as Grommets

Attach Track to  
Ceiling at  
Mounting Holes

Hang Shower  
Curtain and Enjoy  
Your New Trax