

## Installation:

- 1. The U-shaped track is installed on the ceiling, aligning the track as desired. Slip the sections of track together at the connectors and hold to ceiling to see that it fits as desired.
- 2. Hold two sections of track to the ceiling and mark the six holes on the ceiling. Take the track down and drill a 1/8" pilot hole at the marks for the drywall anchor and screw. If a drill hole hits a stud, no drywall anchor is needed and the mounting screws can be screwed directly into the stud at the pilot hole. In holes where you do not hit a stud, drill a 1/4" hole through the drywall; insert a drywall anchor into the 1/4" hole, tapping it in lightly with a hammer until it is flush with the ceiling.
- 3. With Connectors in place, attach the two sections of track at the mounting holes with #10 x 1½" screws Start with the center screw on each section; then add the screws at the Connector. Do not tighten screws.
- 4. Before attaching the remaining two sections of track, insert the Carriers/Hooks into the installed track. Make sure to insert the number of Carriers to match the number of grommets in the curtain. (Note: there are probably a few extra Carriers included in the package.)
- 5. Slip the last two sections of track into place, drill holes in a similar manner as in step 2 and then tighten all the screws.
- 6. Attach the curtain to the Carriers/Hooks.


in Drywall; If No

Stud, Drill 1/4" Hole wall if No Stud

## **Picture Installation:**

Pattern Mark Pilot

Holes on Ceiling

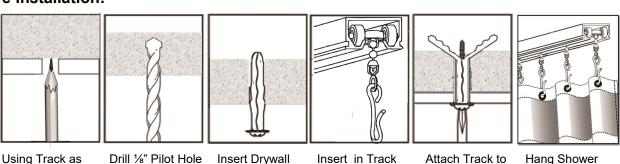

same # of Carriers Ceiling at

Mounting Holes

as Grommets

Curtain and Enjoy

Your New U-Trax

Anchors in Dry-